



IBERITAL DE RECAMBIOS S.A.

FIG.	COD.	DESCRIPCION	DESCRIPTION	FIG.	COD.	DESCRIPCION	DESCRIPTION
5	90122	INTERRUPTOR 2-0-1	SWITCH 2-0-1	42	16627	TAPÓN	TAP
5	90354	INTERRUPTOR 0-1	SWITCH 0-1	43	16628	PLACA NEUTRA	HOSE PLATE
7	16619	DISCO 0-1	DISC 0-1	44	90361	TELERRUPTOR 30A 220V	30A CONTROL SWITCH 220V
7	16620	DISCO 2-0-1	DISC 2-0-1	45	90151	TERMOSTATO CUBA	THERMOSTAT TANK
8	90234	RESORTE MANECILLA	HANDLE SPRING	46	90152	TERMOSTATO CALDERA	THERMOSTAT BOILER
9	90216	MANECILLA INTERRUPTOR	SWITCH HANDLE	48	16637	INDICADOR NEÓN	INDICATOR NEON
10	90359	TIMER LT/LS/LS 705 LAVADO	TIMER LT/LS/LS 705 WASHING	49	16629	CUBRELUZ AMARILLO-VERDE	LAMP COVER YELLOW-GREEN
11	90482	BOTÓN	BUTTON	50	16630	CUBRELUZ TRANSPARENTE	LAMP COVER
12	90483	BOTÓN CALDERA	BUTTON BOILER	51	16631	CUBRELUZ NARANJA	LAMP COVER ORANGE
13	90484	BOTÓN CUBA	BUTTON TANK	52	16632	CUBRELUZ AZUL	LAMP COVER BLUE
18	90360	TIMER 220V LT/LS REGENERADOR	TIMER 220V LT/LS REGENERAT.	53	16633	CUBRELUZ VERDE	LAMP COVER GREEN
23	90290	INDICADOR ANARANJADO	ORANGE INDICATOR	54	16634	BOTÓN CICLO LT/B	BUTTON LT/B
24	90356	TAPÓN INDICADOR	CAP INDICATOR	55	16635	BOTÓN ACLARADO LT/B	BUTTON LT/B
26	16621	INDICADOR ANARANJADO	ORANGE INDICATOR	56	16636	BOTÓN REGENERACIÓN LT/B	BUTTON LT/B
28	90485	BOTÓN CICLO	CYCLE BUTTON				
29	16625	BOTÓN REGENERACION	REGENERATION BUTTON				
32	90357	BOTÓN	PUSH BUTTON				
33	16624	BOTÓN BOMBA DESAGÜE	BUTTON PUMP				
34	16625	BOTÓN DETERGENTE	BUTTON				
35	90154	PRESOSTATO	PRESSURE SWITCH				
39	90486	PORTA-BOTON	BUTTON HOLDER				
40	16626	PLACA CUBA	PLATE TANK				
41	90429	TERMÓMETRO	THERMOMETER				